
SECTION I: INDEX

A

Accumulator, injection B1-15
maintenance G1-26

Alignment, nozzle seat/nozzle tip E- 4
checking G1-33
correcting poor alignment G1-33
procedure, nozzle alignment G1-31

Alloy D-3
contamination D-4
recycling D-5

C

Cable Processor Module
introduction A-2
reference drawings L-1
removal and installation G2-21

Cable Processor Module Closed proximity switch B2-2
adjustments G2-3

Cable Processor Module Components B2-1

Cable-In-Place sensor B2-1
Cable-In-Place pressure switch B2-1
hose B2-1
needle valve B2-2
pneumatic regulator and gauge B2-2
cam slot and roller B2-2
CPM Closed proximity switch B2-2, G2-3
ejector system B2-2
flow control valves B2-2
main slide B2-2
Open/Close cylinder B2-2
transfer unit B2-3

Cable Processor Module Maintenance

Cable-In-Place pressure switch, operation G2-8
cam slot/cam roller alignment G2-19
CPM Closed proximity switch G2-3

CPM removal and installation G2-21
ejector system G2-14
flow control valve adjustments G2-15
shut height adjustment G2-20

Cable termination equipment A-3

Cable Upsetter B2-2

Cable Upsetter/Cable Loaded proximity switch adjustments
Cable Loaded switch G2-6
jaw locking pressure G2-6
upset diameter G2-6
operation G2-5
positioning upset in tool cavity G2-7

Cable-In-Place pressure switch B2-1
operation and adjustments G2-8

Cable-In-Place sensor B2-1

CAFE system A-4

Cam slot and roller B2-2
alignment G2-19

Cavity B3-1

Cavity insert B3-2

Cavity lubricator B1-10
relief valve B1-10
adjustment G1-45
setup and adjustment G1-45

Close/Open cylinder B2-2

Contact, melt pot heater B1-13

Contamination of zinc alloy D-4

Control pendant B1-1, G1-2
Operator Interface Terminal B1-3, G1-4
Push buttons B1-2

Coolant supply and drain B1-6
pot frame cooling coil B1-6
service requirements D-2
setup E- 3

tool coolant circuit B1-6
Cooling coil, pot frame B1-6
CPM-1 system A-3
CPM-5 system A-4
Cylinder, Injection B1-5

D

DC power supply B1-13
Degating tooling B3-3
Drawings
Cable Processor Module reference L-1
Machine reference K-1
Tool reference M-1

Dry cycle F-3

E

Ejector pins B3-2
flashing G3-7
Ejector system B2-2
operation and adjustments G2-14

Electric Nozzle heater
Temperature Control G1-35

Electrical enclosure B1-10
DC power supply B1-13
fuses B1-13
main disconnect breaker B1-12
Master Control Relay (MCR) B1-12
melt pot heater contactor and solid state relay B1-13
Programmable Logic Controller (PLC) B1-12
surge protector B1-13
time switch B1-11

Electrical supply D-2
power conditioning D-2

Element B1-7
replacement G1-39

F

Feeder. See Ingot feeder

Fill gap B1-5
adjustment G1-24

Fill slot B1-5

Filter, pneumatic system B1-14
maintenance G1-46

Fishertech Renewal Parts and Service H-1
after-hours service H-1
emergency service response H-2
service and maintenance contracts H-2
service and training H-1
training H-2
troubleshooting hotline H-1

Fixed tool B3-1
cavity insert B3-2
ejector pins B3-2
fixed tool holder B3-2
nozzle seat B3-2
runner system B3-2

Flash guard B3-3

Flashing
ejector pin G3-7
parting line G3-6

Floor space requirements D-1

Flow control valves B1-9, B1-15, B2-2
adjustments G2-15

Fuses B1-13

G

Gas supply D-2

Gooseneck assembly B1-4
fill slot B1-5
injection sleeve B1-5

H

Heat balance, nozzle C-8

Heater, nozzle. *See* Nozzle heater

Heating element B1-7
replacement G1-39

Hinge Pin-In-Place proximity switch B1-9

Horizontal Cable system A-3

Hose, Cable-In-Place sensor B2-1

Hoses, pneumatic system B1-15

I

Ingot feeder B1-8
setup and adjustments G1-47

Injected Metal Assembly process
overview A-1

Injection accumulator B1-15
maintenance G1-26

Injection capacity D-1

Injection drop-out timer G1-26

Injection plunger B1-5
cleaning G1-20
removal and installation G1-17

Injection sleeve B1-5
reaming G1-20

Injection unit
fill gap B1-5
adjustment G1-24
gooseneck assembly B1-4
fill slot B1-5
gooseneck B1-5
injection sleeve B1-5
Injection cylinder B1-5
injection lever B1-5

injection nozzle B1-5
plunger B1-5
removal and installation G1-22
Y-bracket B1-5

Installation, system D-1
tooling D-7, E-1

L

Lapping
nozzle G1-30
nozzle seat G3-5

Lever, injection B1-5

Lifting the machine D-6

Limit switch, Moving Mechanism Advanced
G1-42

Lubricants
pneumatic component lubricator D-3
tool lubricator D-3

Lubricator, cavity B1-10
relief valve B1-10, G1-45
setup and adjustment G1-45

Lubricator, pneumatic system B1-14
adjustment G1-45

M

Machine maintenance
cavity lubricator - setup/adjustment G1-45
checking nozzle alignment G1-33
fill gap adjustment G1-24
heating element replacement G1-39
ingot feeder setup/adjustments G1-47
injection accumulator G1-26
injection drop-out timer G1-26
injection plunger cleaning G1-20
injection plunger removal/installation G1-17
injection sleeve reaming G1-20
injection unit removal and installation G1-22
lapping the nozzle G1-30

melt pot level adjustment G1-47
melt pot removal/installation G1-36
moving mechanism and limit switch G1-42
nozzle heater G1-34
nozzle removal and replacement G1-27
nozzle seat/nozzle tip alignment G1-31
pneumatic component lubricator adjustment G1-44
pneumatic filter G1-46
Quick Dump/Soft Start air supply valve G1-46
replacing melt pot thermocouple G1-38

Machine reference drawings - Section K-1

Main circuit breaker B1-12

Main slide B2-2

Maintenance bulletins, vendor supplied - Section J-1

Maintenance, Cable Processor Module. *See* Cable Processor Module maintenance

Maintenance, machine. *See* Machine maintenance

Maintenance, tool. *See* Tool maintenance

Manual mode, production cycle F-4

Master Control Relay (MCR) B1-12

Melt pot B1-7
assembly B1-7
frame B1-7
heater contactor and solid state relay B1-13
heating element B1-7
level adjustment G1-47
removal and installation G1-36
replacing thermocouple G1-38
time switch B1-11

Melt pot heater contactor and solid state relay B1-13

Mixing block, nozzle heater B1-6

Movable tool B3-2
cavity insert B3-3
flash guard B3-3
movable tool cavity insert B3-3

safety pin B3-3

Moving mechanism B1-8, G1-42

Advanced limit switch B1-9
flow control valves B1-9
hinge pin B1-9
Hinge Pin-In-Place proximity switch B1-9
link pin B1-9
maintenance G1-42
ratchet pin B1-9

Moving Mechanism Advanced limit switch B1-9
maintenance G1-42

N

Needle valve, Cable-In-Place sensor B2-2

Nozzle

alignment procedure B1-5
lapping G1-30
removal and replacement G1-27

Nozzle heat balance C-8

Nozzle heater B1-6
adjusting flame G1-34
adjusting valves B1-6
air and gas valves B1-6
Electric G1-35
temperature range B1-7
heat balance C-8
setup E-4
mixing block B1-6
pneumatic regulator B1-6
setup E-4
spark igniter and flame detector G1-34
twin torch tip B1-6

Nozzle seat B3-2
lapping the nozzle seat G3-5

Nozzle seat/nozzle tip
alignment G1-31
correcting poor alignment G1-33

O

Operating sequence F-1

Operator Interface Terminal (OIT)

- Main Menu screen G1-4
- Melt Pot Control screen G1-12
- Oph Diagnostics screen G1-13
 - Switches failing to close G1-14
 - Switches sticking closed G1-14
- Process Diagnostics screen G1-15
- Process Timers screen G1-11
- Run Manual screen G1-9
- Run Mode Option Menu screen G1-5
- Run Semi-automatic screen G1-8
- Setup Oph1 screen G1-6
- Setup Oph2 screen G1-7

Operator's duties

- at beginning of production F-5
- at end of production F-8
- during production F-6

Option 5 Cable Processor Module A-2

P

PLC. *See* Programmable Logic Controller

Plunger B1-5

- cleaning G1-20
- fitting to sleeve G1-26
- removal and installation G1-17

Pneumatic component lubricator B1-13

- adjustment G1-44

Pneumatic filter B1-14

- maintenance G1-46

Pneumatic regulator/valve, C-I-P sensor B2-2

Pneumatic supply D-2

Pneumatic system B1-13

- filter B1-14
- flow control valves B1-15
- hoses B1-15

injection accumulator B1-15

lubricator B1-14

pneumatic valves B1-14

Quick Dump/Soft Start pneumatic supply valve B1-14
setup E-1

Pneumatic valves B1-14

Positioning and levelling D-7

Power conditioning D-2

Preventative maintenance schedule G4-1

Production cycle, semi-automatic mode F-3

Programmable Logic Controller (PLC) B1-12

Push buttons

- Control On illuminated push button B1-2
- Cycle Start push button B1-2
- Emergency Stop (E-Stop) push button B1-2
- Setup/Run key selector switch B1-2

Q

Quick Dump/Soft Start air supply valve B1-14
maintenance G1-46

R

Reference drawings

- Cable Processor Module - Section L-1
- Machine - Section K-1
- Tool - Section M-1

Regulator and gauge, Cable-In-Place sensor B2-2

Relief valve, cavity lubricator B1-10
maintenance G1-45

Return procedure - equipment A-6

Runner system B3-2

- troubleshooting G5-1

S

Safety

- for your safety iii
- personal protective attire and devices v
- precautions iv
- system setup - first alloy shots vi

Safety pin B3-3

Service requirements D-1

Services, connecting D-7

Setup

- checking the coolant system E- 3
- checking the nozzle alignment E- 4
- checking the nozzle heater E- 4
- checking the pneumatic system E- 1
- checking the timer settings E- 4
- installing the tooling E- 1
- turning the main breaker on E- 1
- turning the melt pot on E- 4

Shut height adjustment G2-20

Sleeve, injection B1-5

- reaming G1-20

Solid state relay B1-13

Sound level D-1

Specifications D-1

- Vendor supplied specifications - Section J-1

Sprue type operation C-1

Sprueless type operation C-8

Start up and operation

- duties at beginning of production F-5
- duties at end of production F-8
- duties during production F-5
 - ingot feeder F-7
- system cycling F-1
 - dry cycle F-3
 - production cycle, run manual mode F-4
 - production cycle, run semi-automatic mode F-3

Surge protector B1-13

Switch settings

- limit switch, Moving Mechanism Advanced G1-42

Switches

- failing to close G1-14
- sticking closed G1-14

System installation D-1

- connecting the services D-7
- general specifications D-1
- lifting the machine D-6
- positioning and levelling D-7
- service requirements D-2
- uncrating components D-6

System setup

- checking the coolant system E- 3
- checking the nozzle alignment E- 4
- checking the nozzle heater E- 4
- checking the pneumatic system E- 1
- checking timer settings E- 4
- installing the tooling E- 1
- turning the main breaker on E- 1
- turning the melt pot on E- 4

T

Terminology A-7

Theory of Operation

- nozzle heat balance C-8
- sprue type operation C-1
- sprueless type operation C-8

Thermocouple B1-7

- replacing G1-38

Thermocouple assembly B1-7

- protector tube B1-7
- thermocouple B1-7

Time switch B1-11

- Theben Timer Instructions J-2

Timer, injection drop-out G1-26

Timer settings E- 4

Tool coolant circuit B1-6

Tool installation D-7, E- 1

Tool maintenance

avoiding damage G3-1

Cable upsetter tooling G3-7

Degating tooling G3-8

ejector pins G3-7

flashing G3-7

lapping the nozzle seat G3-5

removing the tool G3-3

tool repair G3-6

drag or scratches on termination G3-6

parting line flash G3-6

Tool reference drawings - Section M-1

Tool removal G3-3

Tool repair

drag or scratches on termination G3-6

parting line flash G3-6

Tooling Components

Cable upsetter tooling G3-7

cavity B3-1

Degating tooling G3-8

fixed tool B3-1

cavity insert B3-2

ejector pins B3-2

fixed tool holder B3-2

nozzle seat B3-2

runner system B3-2

movable tool B3-2

cavity insert B3-3

flash guard B3-3

movable tool holder B3-2

safety pin B3-3

Transfer tooling B3-3

Transfer unit B2-3

Transfer Unit/Locked proximity switch

adjustments

down and left/right positions G2-11

even clamping pressure G2-10

flow controls G2-12

in/out position of transfer unit G2-13

to set the left stop G2-12

to set the UP position G2-11

transfer jaw alignment G2-10

up/down and left/right stops G2-11

operation G2-10

Troubleshooting G5-1

operational problems displayed on OIT G5-8

the Oph Diagnostics screen G5-8

the Process Diagnostics screen G5-13

operational problems not displayed on OIT G5-4

runner too long or too short G5-1

Twin Torch Tip, nozzle heater B1-6

U

Uncrating components D-6

Upset sensor/Upset Sensor proximity switch

adjustments G2-17

operation G2-16

replacing G2-18

Upsetter tooling B3-3

V

Valves, pneumatic B1-14

Vendor Supplied Bulletins - Section J-1

W

Warranty A-5

Watlow Instructions J-6

Weight D-1

Y

Y-bracket B1-5

Z

Zinc alloys

contamination of D-4

preventing contamination of D-5

recycling D-5

used in the IMA process A-2